


# Ge-325-LED User Manual

## 1. WIRE CONNECTION:




Power supply: DC24V, Switch signal: DC24V, 400mA max

## 2. INSTALLATION

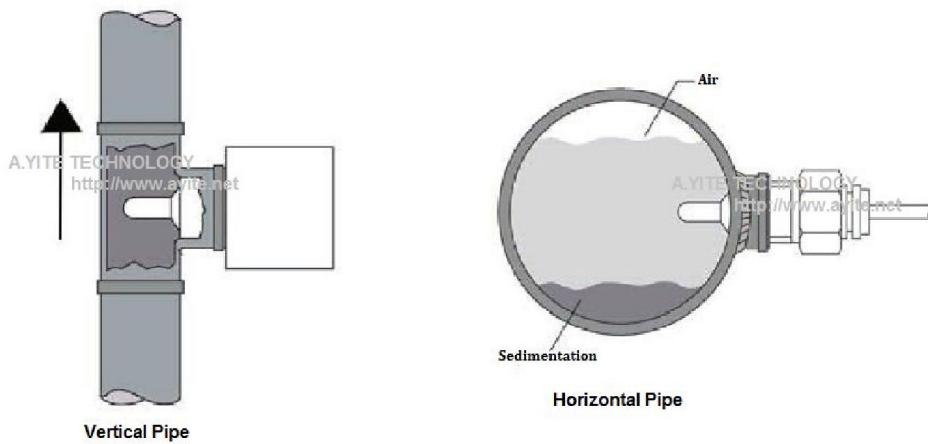

## 3. ADJUST SET-POINT.

Arrange the water flow rate same as your flow setpoint, e.g, you want set the flow setpoint as 7L/min, you must make the flow rate as 7L/min at this moment, then adjust the screw.

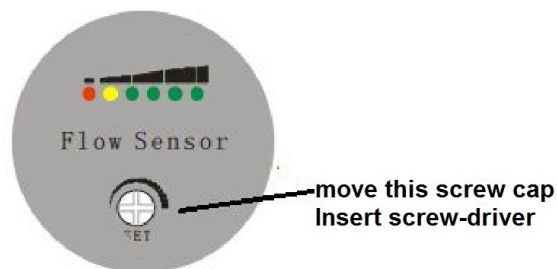

- **Red LED:** lower than the set point
- **Yellow LED:** equal or higher than the set point
- **Green LED:** beyond the set point (1, 2, 3 or 4)

